


STORAGE CABINET

Item Numbers 8551-8553

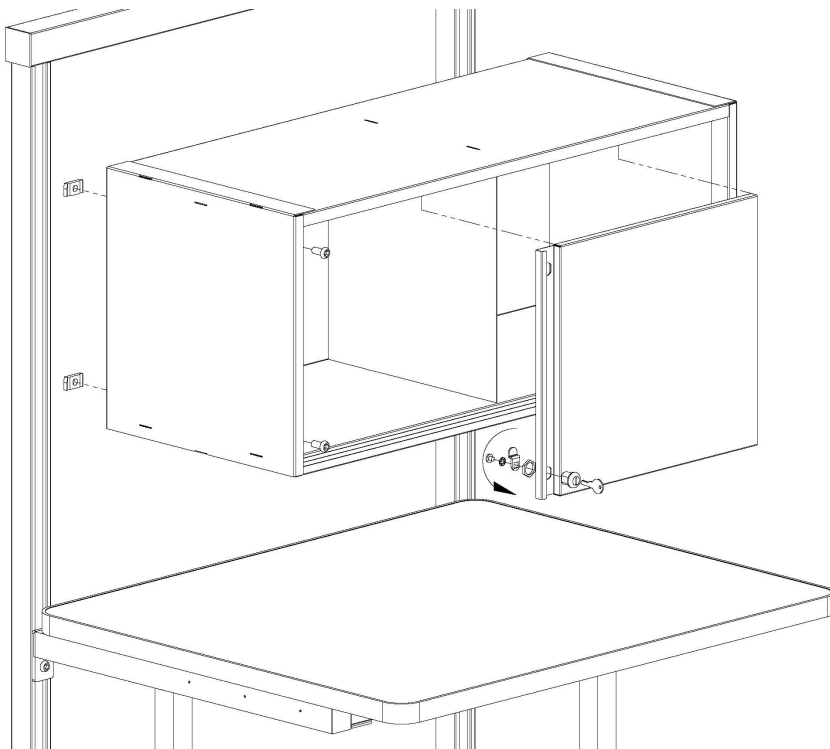

PARTS AND HARDWARE QUANTITY

Storage Cabinet	1
Lock mechanism (If Ordered)	2
Basic Bolts	4
Basic Nuts	4
7/32 Allen Wrench	1

1. Remove doors one at a time by sliding to the center of cabinet, lift up and tilt bottom of door forward.
2. Insert Basic Bolts into the holes on the inside corners of the Cabinet. Secure with a Basic Nuts and turn one revolution.
3. Position Storage Cabinet on frame and turn bolts 90 clockwise to grip channel. Tighten bolts and reinstall doors.
4. If locks are ordered separately, install by pushing out the hole in the bottom corner of each cabinet door. Assemble lock as shown. Ensure unthreaded part of lock and key teeth are parallel with each other. see step 5 for lock rotation.
 - 5a. For the left side door, the key must rotate counter clockwise from top to bottom (as shown)
 - 5b. For the right side door, the key must rotate clockwise from top to bottom (opposite as shown)

Need Help? Call Assembly Support at 800.318.2770

Production Basics, Inc. Massachusetts, USA 800.318.2770 617.926.8100 Fax: 617.926.8010 www.pbasics.com

ASSEMBLY VIDEOS AVAILABLE ON-LINE <http://video.pbasics.com>