


# Production **BASICS**

How to install with OH arms already installed on frame.  
Assemble bracket as shown. Loosen one side at a time, do not remove bolts/simply loosen OH arm bolts. Slide bracket behind arm & insert tube. Tighten bolts holding tube and tighten OH arm bolts. Then slide on curtain to tube. See images below

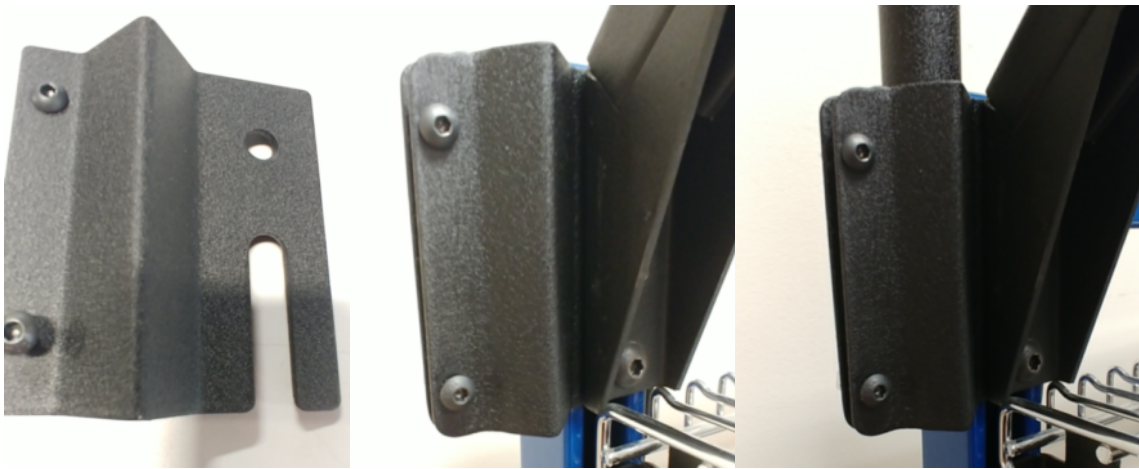

How to install on to upright only. Assemble bracket as shown. Insert tube and tighten bolts holding tube. Attach bracket and tube assembly to upright and tighten bolts holding bracket to upright. Then slide on curtain to tube. See images below.

