



## SUPPLY COMPARTMENT

Item Numbers 8497-8499


### Step 1

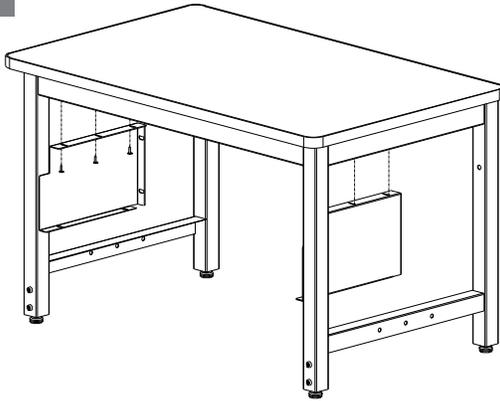

### Step 2

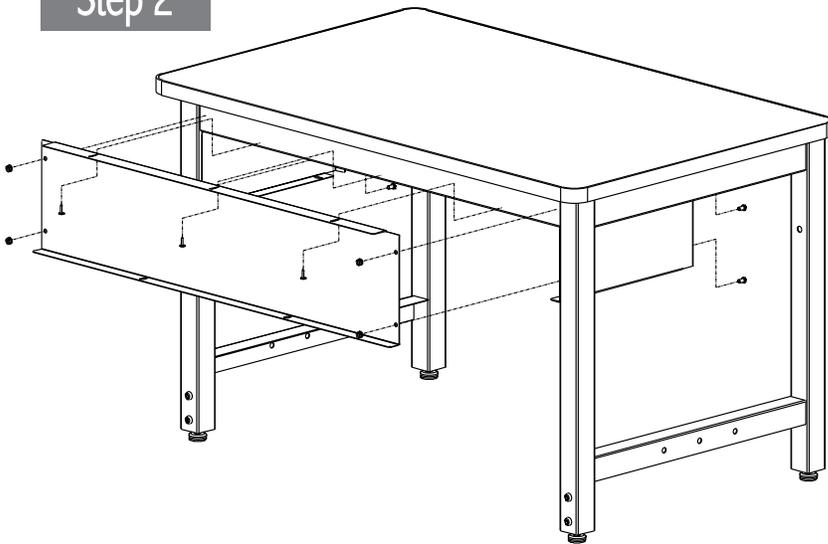

### Step 3

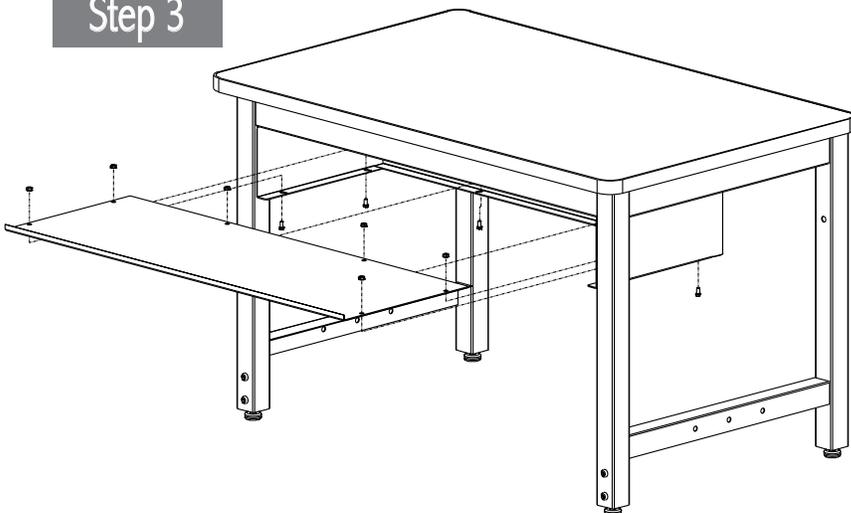

## ACCESSORIES

PARTS AND HARDWARE	QUANTITY
Supply Compartment Ends	2
Supply Compartment Back	1
Supply Compartment Base	1
Wood Screws	9
Keq Nuts	10
1/4-20 Bolts- 1/2"	10
<b>Other Items Needed (not included)</b>	
Phillips head drill or screwdriver	

1. Use wood screws to attach Supply Compartment Ends to underside of worksurface. Make sure the side without a flange is positioned forward the outside of the the Compartment ends are flush with RTW Table legs.
2. Attach Supply Compartment Back to the Compartment Ends using nuts and bolts. Secure with wood screws through the top flange on the underside of the worksurface.
3. Slide Supply Compartment Base on to the Ends/Back assembly. Make sure the lip is in the front of the table. Secure with nuts and bolts.